


Rasland®

คู่มือการติดตั้ง **RA SUPREME304**

MANUAL RA SUPREME304-2022-01

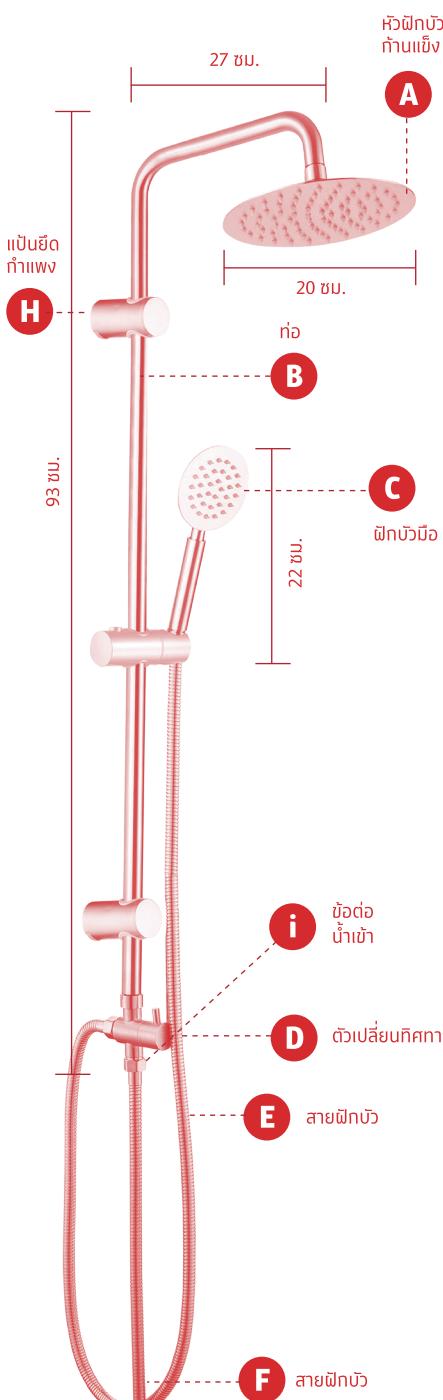

การໄລ່ນໍາກ່ອນທຳການຕິດຕັ້ງ

แนะนำอย่างยิ่งสำหรับห้องน้ำใหม่ ที่ยังไม่เคยใช้งาน หรือในกรณีเปลี่ยนสินค้าใหม่

1. ໄລ້ນ້ຳວອກຈາກທ່ອງທ່ຽວແພັນ ຖ້າດ້າຕ່ຽມໃນການໃສ່ວ່າລົວ ເປີດປັດບ້າ ໂດຍການເປີດວ່າລົວນ້າຫ້າສັກໃນໜ້ອງບ້າໃໝ່ສຸດ ເພື່ອໃຊ້ແຮງບ້າ ໄລ້ສິ້ແປລົກປລອນໃຫ້ໂລກວອກຈາກທ່ອງທ່ຽວແພັນ ໂດຍໃຊ້ຕົ້ນບ້າ ທີ່ຈະໄວ້ສັດໃນການປັດກັນບ້າກະເຕັນ ໂດຍໄປໆໄດ້ຕ້ອງໃສ່ວ່າລົວໃດໆ ກໍທ່ຽວແພັນ ເພື່ອເປັນການໃສ່ຝູນລະວອງຕະກຽນ ດະກອນ ເສຍරາຍ ທີ່ຈະເຄີຍເຫັນທ່ານຂອງຢູ່ໃໝ່ກ່ຽວກົກ
 2. ເປີດບ້າທີ່ຈະໄວ້ເປັນເວລາ 30 ວັກທີ່ ເພື່ອໃຫ້ບ້າສິ້ແປລົກປລອນ ໄລ້ລວກມາຈາກທ່ອງທ່ຽວແພັນ ກັ້ນນີ້ເພື່ອໃປ່ມ ສິ້ແປລົກປລອນດ້ານທີ່ເນັດກັບທ່ອງບ້າ ອຸດຕົນຝັກວັງທີ່ຈະໄວ້ສັດ
 3. ປັດວ່າລົວຫ້າສັກໃນໜ້ອງບ້າ ແລະປະກອບສິນຄ້າຕາມການເຕີດຕົ້ນດ້ານນ່າງ

วิธีการติดตั้งสินค้า

1. ใส่ประทีกบยารงะห่วงข้อต่อ เพื่อไม่ให้หัวซึบ และประกอบข้อต่อหัวเข้า
(i) เข้ากับด้านล่างของตัวเปลี่ยนเกียร์ค้างน้ำ โดยใช้ประทีกนยางยะห์ห่วงข้อต่อเพื่อไม่ให้หัวซึบ
 2. วัดระดับต่ำๆและทำเครื่องหมายในการเจาะรูที่พนัง เพื่อก่อการเจาะรูใส่แป้นยืดกำแพง (H) และ (i)
โดยหัวพาร้อมกันทั้งสองจุด
 3. เจาะรูที่ก้ามเพดานตามรูที่หัวปืนแป้นยืด โดยต้องระวัง !!!! อย่าให้หัวปืน ยืด กะลุกกำแพงไปโดนก่อหัว
ที่เดินไว้ภายในกำแพงเดิมขาด
 4. ใส่ตัวแป้นยืดและครอบตัวแป้นยืดกำแพง เข้ากับก่ออลอยแบบตรง
 5. ใส่สายผูกบัว (E) โดยใช้หัวต่อตัวด้านลับ กว้างของสายผูกบัว ต่อ กับตัวเปลี่ยนเกียร์ค้างน้ำ
โดยใช้ช้อนหุบุน ควรใส่ประทีกนยางกันน้ำซึบด้วย และด้านยาวกว่าต่อ กับผูกบัว มือ (C)
โดยใช้ช้อนหุบุน ควรใส่ประทีกนยางกันน้ำซึบ (สายขนาดยาว 150 ซม.)
 6. 血腥ผูกบัวมือเข้ากับกง血腥และ血腥ผูกบัวที่อยู่ก่ออลอยแบบตรง
 7. หุบุนหัวผูกบัวก้ามแพ็ง (A) เข้ากับข้อต่อผูกบัวก่ออลอย โดยใช้ประทีกันหัวซึบ
และใช้มือหุบุนให้แนบสนิท
 8. ใส่สายผูกบัว (F) โดยใช้หัวต่อตัวด้านลับกันกว้างของสายผูกบัว ต่อ กับปลายด้านล่างสุดของข้อต่อ
โดยใช้ช้อนหุบุน ควรใส่ประทีกนยางกันน้ำซึบด้วย และด้านยาวกว่าต่อ กับรูหัวอุจ
ของเครื่องทำน้ำอุ่น (สายขนาดยาว 120 ซม.)
 9. เปิดวาล์วหน้าใช้เวลาได้ตัวตามปกติ

វិធានការកំណត់សាខាជាម្ចាស់

1. ผ้ามันใช้เนื้อยาลังห้องน้ำ ในการทำความสะอาดส่วนอวัยวะเพศค่ะ เพราะจะทำให้ผิวของสิ่งสกปรกค้างค่าเสียหาย
 2. ไม่ควรใช้สวัสดิ์พูดหยาบชัดทำความสะอาดส่วนอวัยวะ ต้องใช้ฟองน้ำเท่านั้นในการเช็ดทำความสะอาด
 3. ใช้น้ำยาล้างจานผสมน้ำ ในการล้างให้แห้งลง
 4. หากใช้ชามาแล้ว รูบ้าที่ฝึกบัวบือ หรือฝึกบัวก้านแมงตัน สามารถใช้น้ำยาบูรปุ่มนิยาม ในขณะเปิดน้ำ เพื่อให้การบันทึกที่อุดอยู่ หลุดออกจากการฝึกบัว
 5. ไม่ควรดึงสายฝึกบัวในการปรับระดับความสูงของข้องแขวน เพราะจะทำให้สิ่งสกปรกค้างค่าเสียหายได้


การรับประทาน

1. สืบค้ารับประภันເລີພະບ້າຮ່ວ້ນສົມ ຖໍ່ວ່າລົງເປີດ ປຶດນັ້ນ ເກົ່ານັ້ນ ໂດຍຮັບປະກິບໜ້າໄມ້ຮ່ວ້ນສົມ ເປັນເວລາ 5 ປີ
 2. ການຮັບປະກິບ ໄມຮັບປະກິບໃນກຽນທີ່ການສັນຂອງບ້າເກີດຈາກ ການຕັດຕັ້ງຜິດວິຫຼື ລັບປັບການດໍາລັງ ໄສຳໃໝ່ຂອງລາວ ຮັບອື່ນສິ່ງແປລກປລອນອຸດັຕນກາຍໃນ ຮັບອຸດັຕນຈາກຄະກັນເນົາ ຮັບອື່ນສິ່ງທີ່ໄປສະວັດ
 3. ການຮັບປະກິບ ກາງບຣີຫັກຍ ຈະຮັບຜິດຊອບໄປເຖິງມູລຄ່າຂອງສັນຄ້າ ໂດຍໄມ້ຮັບຜິດຊອບ ຄວາມເສີ່ຫຍາຍເຈັ່ງໆ ນວກເຫັນຈຳຈັດສັນຄ້າ
 4. ໃນການເຄລມສັນຄ້າ ຕ້ອງແສດງໃບເສົ່ງ ໃນການຂ້ອຍເປັນສຳຄັນ ມີຈະນັ້ນກາງບຣີຫັກຍ ສົງນສົກເກີນໃນການໄປ່ຄອມສູນຄ້າ

Rasland®

INSTALLATION GUIDE RA SUPREME304

MANUAL RA SUPREME304-2022-01

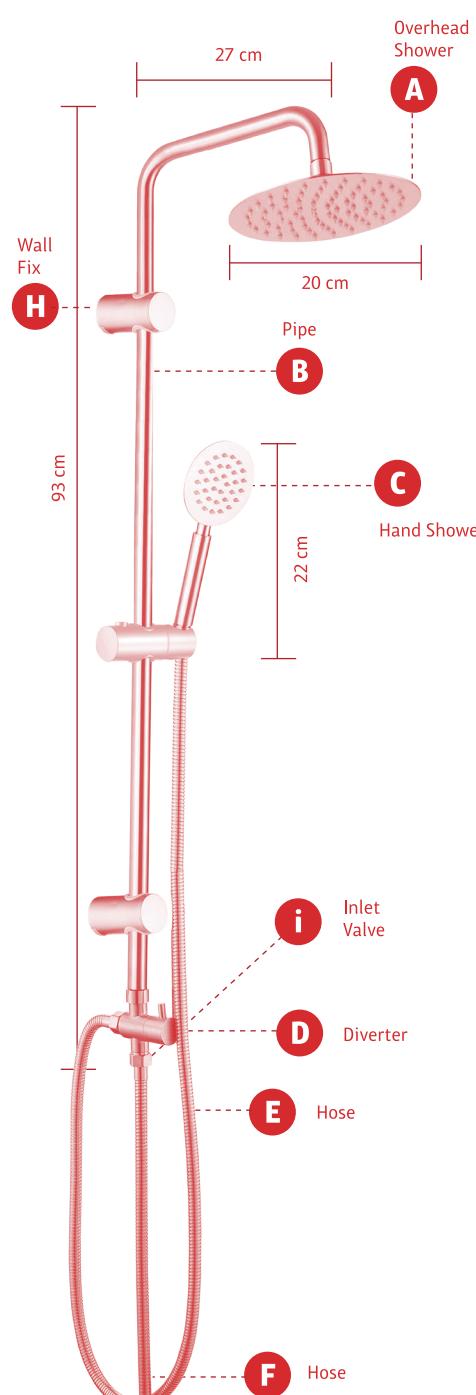

Run water through the in-wall-pipe before installing products

highly recommend for the new bathroom that has never been used before

1. Run water through the in-wall-pipe by opening the water valve and let water runs out from the pipe before installing any parts of products to the pipe. Please use any containers to block the water splash from the pipe during the run through. This process is highly recommended in order to wash out the deposit or any sands in the water pipe so that it will not cause damage to the products.
2. Run through process would take around 30 seconds by opening the valve all the way open so that the flow will bring out all the deposits out from the in-wall-pipe.
3. Close the main valve and then follow the installation guide below.

Installation guide

1. Measure the height at the position that the fixing (H) and (i) in order to drill holes on the wall.
2. Drill holes on the wall. (**Please be careful of the water pipe inside the wall that the screws are not supposed to cause any damage to the in-wall-pipe.**)
3. Put diverter to the end of the pipe by putting an o-ring in between. Then, screw the pipe to the wall.
4. Put the shower hose (E) by putting the shorter nut with the diverter and the longer nut with hand shower (C). Make sure that the o-ring is also put between the angle in order to prevent water leakage.
5. Hang the hand shower with sliding hook on the straight pipe.
6. Put the overhead shower(A) with pipe by putting an o-ring in between the angle to prevent water leakage.
7. Put the shower hose (F) by putting the shorter nut with the low-end of the pipe and the other end of the hose to outlet of the Water heater unit.
8. Turn on the water valve and enjoy the Shower Rain.

Clean guide and maintenance

1. Do not use acid chemical to clean the products because it will ruin the surface of the chrome plated.
2. Do not use rough surface material to rub or clean the product. Soft material is highly recommended.
3. Use dish washing chemical mix with some amount of water to shine the product.
4. In the case that the deposit blocks holes on the overhead shower or hand shower, the deposit can easily be removed by turning on the water and rub on the rubber head.
5. Do not adjust the height of the sliding hook by pulling the shower hose but use hold the button on the hook while sliding hook up and down.

Guarantee conditions

1. The warranty is only for the leakage of the water valve only (diverter). The period is counted from the date of purchase for 10 years.
2. The warranty is not effective if the leakage caused by mis-installing or deposit or lime that caused by water condition.
3. The company will be responsible the damage that is not exceed the price of the product and will not be responsible other things other than the product itself.
4. In order to claim the warranty, the sales receipt must be presented otherwise the company has the right to refuse the claim.